

SAFETY KNIFE CUTX MIDI X8060



Versatile use thanks to ergonomic shape


With our CUTX MIDI X8060, we go one step further: the ergonomically shaped handle enables effortless and efficient work. The blade is triggered with the handle, no further actuation of a slider is necessary. The CUTX MIDI X8060 can be used with all common materials and glides effortlessly through the material to be cut thanks to its comfortable handling.

Security certificate

GS certificate: Nr. 187282 - 7551 - 13737 - 2023
Date of issue: 19.10.2023
applies to: Art. 3010162
Art. 3010163



Dimensions & Details

Variations:	Art. 3010162, grey-black Art. 3010163, detect blue other colours on request
Packing unit:	Individual packaging
Dimensions (L x B x H):	150 x 63 x 19 mm
Product weight:	66 g
Cutting depth:	18 mm
Base material:	plastic
Security level:	2 
	Fully automatic blade retraction
EAN-Code Art. 3010162:	4251946400331
EAN-Code Art. 3010163:	4251946400393
Customs tariff number:	82119300

Fully automatic blade retraction

The fully automatic blade retraction on safety knives offers you a high level of protection against injury. It works even if the user is still holding the handle. The blade is always retracted fully automatically after the cutting process as soon as it leaves the material to be cut.

Economical

The blade of the CUTX MIDI X8060 can be reversed or replaced. The cutter itself can accompany you for a long time. As the blade can be used on both sides, the CUTX MIDI X8060 is an extremely durable safety knife with low costs. There are different blade types depending on the application and requirements.

Sustainable

We want to do our bit: CUTX safety knives are made in Solingen / Germany from up to 80% recyclable plastic. We use sustainable energy for production and assembly, including from our own solar power system.

Our extensive experience in knife production also guarantees consistently high quality and durability.

You can also do your bit: we take back old cutting tools and recycle them properly. Please contact us: mail@cutx.info

Printing and special colours possible

Our items are also available in your favorite colours. In addition, they can be printed, so that you have here an excellent and individual advertising medium, which your customers will certainly take at hand again and again.

Extremely simple and safe

Press the handle, the blade comes out, attach, cut. The fully automatic blade retraction ensures that the blade automatically slides back into the housing as soon as you leave the material to be cut. Even if you continue to hold the handle!



foil



cardboard



strapping tape



adhesive tape



paper

Technical information

 
Safety knife
CUTX MIDI X8060




Changing blades

Take care when changing blades. Risk of injury!


To change the blade, press the handle and continue to hold it firmly. Push the upper slider all the way forwards. Now carefully grasp the blade between your thumb and index finger and pull it forwards out of the housing. You can now carefully turn or replace the blade. Reinsert the blade by pushing it into the blade holder as far as it will go. You can then return the slider to the centre position. Finished.

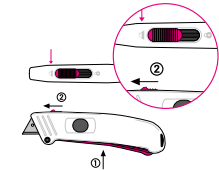

 
Press the handle, move the slider all the way forwards.

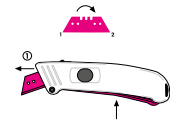

 
Pull the blade forwards. Turn or replace the blade. Blade type: H10002 or comparable blades with the same dimensions.

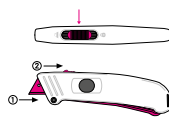

Slide the blade into the blade holder.

 

 Move the slider back to the centre position. The blade is automatically locked and secured.

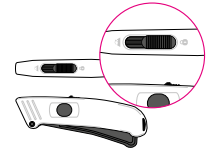

Slider in the rear position secures the handle against unintentional release of the blade.

Spare parts / blades

The spare blades are supplied in dispensers of 10 each.

H10002, trapezoidal blade (can be used on 2 sides, replaceable)

 
H10005, rounded trapezoid blade (can be used on 2 sides, replaceable)




see also safety instructions

Safe handling


Press and hold the handle, apply and cut. The fully automatic blade retraction ensures that the blade automatically slides back into the housing as soon as the food is removed.

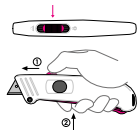

 Position the slider in the centre, press and hold the handle. Position the blade, cut.

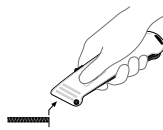

 At the end of the cut, the blade holder automatically returns to the end position.



Release the handle.

Safety instructions

Please read the instructions carefully and keep them to ensure prolonged and safe use of our cutting tools.

This product is only approved for manual cutting and must not be used for purposes other than those for which it is intended. Care must be taken to ensure correct handling and use.

Avoid injury: Only use cutting tools that are in good condition and have sharp, undamaged blades. Exercise caution when handling this product. Be sure to familiarise yourself with its handling and operation beforehand. The sharp blade can cause serious cuts. Do not hold the blade, do not place your other hand along the cutting path of the cutter and always cut past your body. Replace blunt blades quickly and dispose of them properly.

Tighten the cutter to avoid injury. Store the cutter in a safe place.

Keep the cutter clean and do not expose it unnecessarily to dust, dirt and moisture to ensure longevity.

No liability is accepted for consequential damage.

Subject to technical changes and errors!

This product should not be used by children!